



**RODDENBERRY.COM**

**#PRP1769BU**


# ***Star Trek: First Contact Phaser Rifle*** **Battery Replacement and** **Operating Instructions**



## **Battery Replacement - Step 1:**


Locate the battery cover door on the left side of the phaser rifle. Loosen a screw and leave in place using a small screwdriver, it doesn't matter which screw you use for the pivot.

---

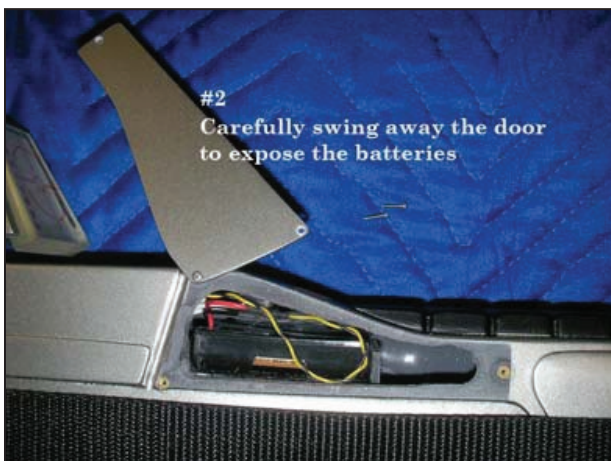


## **Battery Replacement - Step 2:**

Remove the other two screws and carefully swing away the battery door.

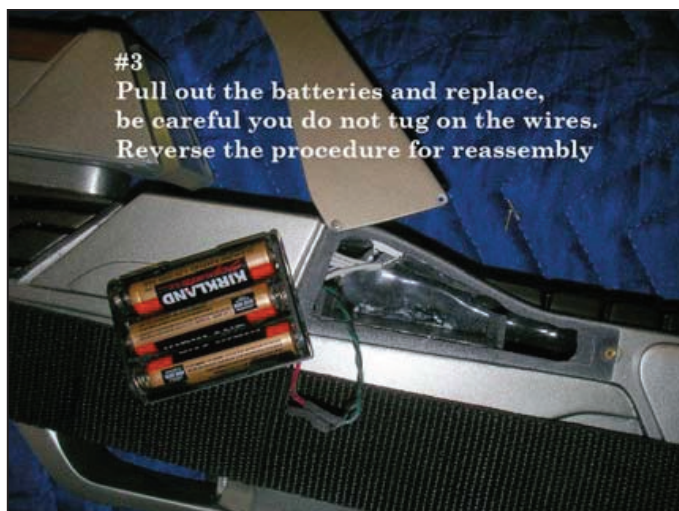

### **Battery Replacement - Step 3:**

Pull out the battery pack and replace with 3 @ AAA cells (1.5V each, 4.5V total). Re-insert the pack into the rifle and screw the cover on.

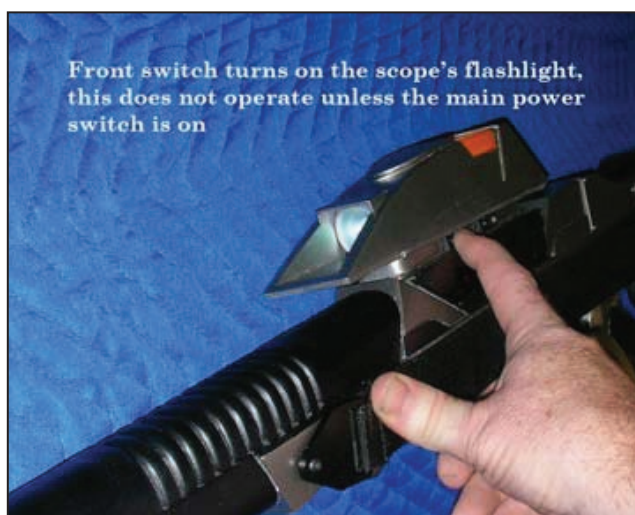

### **Operating Instructions:**

The rearward switch on the left side below the target scope turns on main power, including the force-setting bargraph, the red LEDs on the side, and the target light; this also allows sound and emitter LED firing of the rifle by pressing the trigger button. The forward switch turns on the white flashlight LED, this does not operate on its own unless the main power on.

