

TOMENOSUKE BLÄSTER EXPLODED DIAGRAM

- English-language Key -

A01 Front Cap	D01 Laser Sight
A02 Receiver	D02 Ejector Rod
A03 Receiver End	D03 Ejector Rod Pin
A04 Bolt	D04 Frame Pin (x4)
A05 Bolt Handle	D05 Latch Screw
A06 Safety	D06 Crane Shaft
A07 Right Cover Knob	D07 Hammer Pin
A08 Mount A	D08 Shear Pin
A09 “Minus” Screw	D09 Main Spring Guide Head
A10 Mount B	D10 Main Spring Guide Rod
A11 Weaver Knob	D11 Grip Pin
A12 Hammer Ball	
A13 Housing Screw 1	E01 Barrel Jacket
A14 Housing Screw 2	
A15 LED Switch Cover	F01 Cylinder
A16 Front Trigger	
A17 Rear Trigger	G01 Trigger Spring (x2)
A18 Trigger Guard	G02 Cylinder Spring
A19 Cylinder Latch	G03 Main Spring
A20 Crane	G04 Hammer Hole Spring
A21 Ejector	
A22 Grip Frame 1	H01 Right Grip*
A23 Main Spring Seat	H02 Left Grip*
A24 Grip Frame 2	
A25 Cover 1	I01 Magnet
A26 Cover 2	
A27 Cover 3	S01 #8-32x3/16 Button
A28 Grip End	S02 #5-40x3/8 Cap (x4)
A29 Cartridge (x5)	S03 1/4-2px1” Cap
A30 Cartridge Rim (x5)	S04 #2-56x3/16 Button
	S05 #2-56x1/4 Button
B01 Right Frame	S06 #5-40x1/4 Button
B02 Left Frame	S07 #5-40x5/16 Button
B03 Hammer Right	S08 #4-40x1/4 Button
B04 Hammer Left	S09 #5-40x1/4 Cap (x2)
B05 Housing Stopper	S10 #4-40x1/4 Cap
B06 LED Cover	S11 #5-40x7/16 Cap
B07 Housing	S12 #5-40x1” Cap
B08 Magazine	S13 #5-40x5/8 Nut
B09 Right Cover	S14 #5-40x5/8 Cap
B10 Left Cover	S15 #5-40x1/2 Cap
B11 Collar	S16 #5-40x1/4
	S17 M3x8
C01 LED Unit	S18 M3x6
C02 LED Switch	S19 M2x4 (x2)
C03 Φ3 LED Green (x2)	

*On the original Japanese-language exploded diagram, H01 has been mislabeled as the “Left Grip” and H02 mislabeled as the “Right Grip.”