



RODDENBERRY.COM

#PRP1751

***Star Trek*™ Solid "Boomerang" Phaser Prop Kit Painting Manual**




Roddenberry.com presents a one-piece Phaser Kit which will look great in any prop display or to wear with a costume! Dubbed the "Boomerang" Phaser by the original prop makers, this solid casting is ideal for the novice prop hobbyist.


YOU WILL NEED:

- Sandpaper (220-320 grit for sanding mold lines and putty holes smooth, 400-600 for final finishing and painting)
- Auto body putty
- Masking tape
- Spray paints (primer, medium gray metallic, semi-gloss black, gloss black)
- Brush-on paints (antique or off-white, silver or aluminum, metallic blue, and light green)
- A small hobby paint brush

Step 1: After sanding to desired finish, primer the phaser first, then putty and sand any objectionable cracks or holes and primer again. Spray the medium gray metallic and let dry for several hours. Using the masking tape, mask the phaser so the areas to be sprayed black are exposed then spray paint the black (gloss black for the emitter, semi-flat black for the grip and control button area).

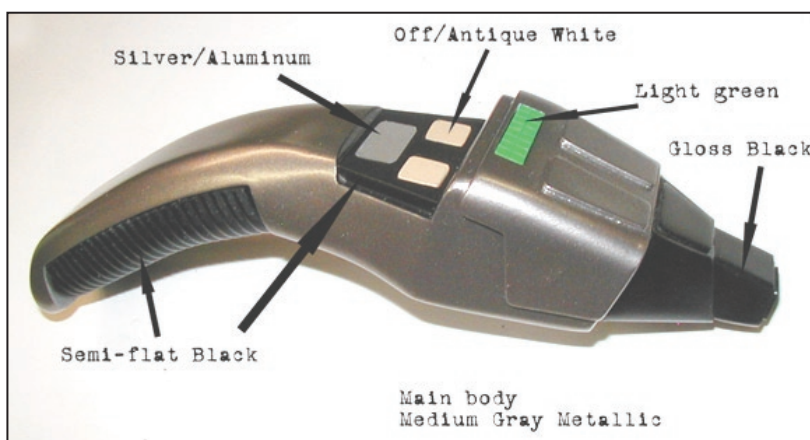

Step 2: After the black paint has cured, you can brush paint the buttons as shown, or mask and spray paint them (off white for the two setting buttons and aluminum/silver for the trigger button). Brush paint the LED display rectangle with green, and the slot at the bottom side of the emitter with metallic blue, then your Federation Boomerang Phaser is finished!

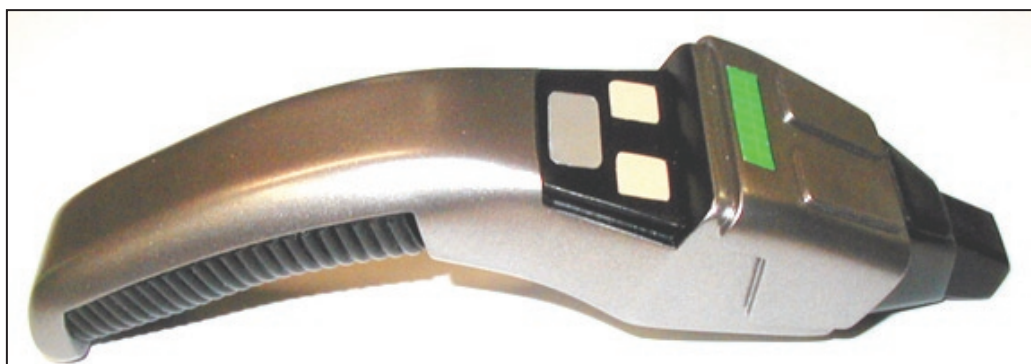

IMPORTANT NOTES:

The physical reproduction by any means known or yet to be invented (including recasting and/or reverse-engineering or 3D scanning/printing) of the Roddenberry.com Boomerang Phaser Kit or any of its parts is **expressly prohibited** under U.S. and International copyright and product protection laws.

Copyright © 2009 Roddenberry Productions.

Star Trek and related marks and logos are Trademarks of CBS Studios Inc. All rights reserved.