



RODDENBERRY.COM

#PRP1752

***Star Trek: Nemeis™* Solid "Dolphin" Phaser Prop Kit Painting Manual**




Roddenberry.com presents a Phaser Kit which will look great in any prop display or to wear with a costume! Due to its shape, it was referred to as the "Dolphin" Phaser by the original prop makers.

YOU WILL NEED:

- Sandpaper (220-320 grit for sanding mold lines and possible filled holes smooth, 400-600 for final finishing and painting)
- Auto body putty
- Masking tape
- Spray paints (primer, medium gray metallic, semi-gloss black, bright silver or aluminum, and red)
- A small hobby paint brush
- 5-minute epoxy

Step 1: After sanding to desired finish, primer the phaser first, then spray the medium gray metallic and let dry for several hours. Using the masking tape, mask the phaser so the areas to be sprayed black are exposed then spray paint the black. When that's dry, mask for the bright silver emitter tip and spray paint.

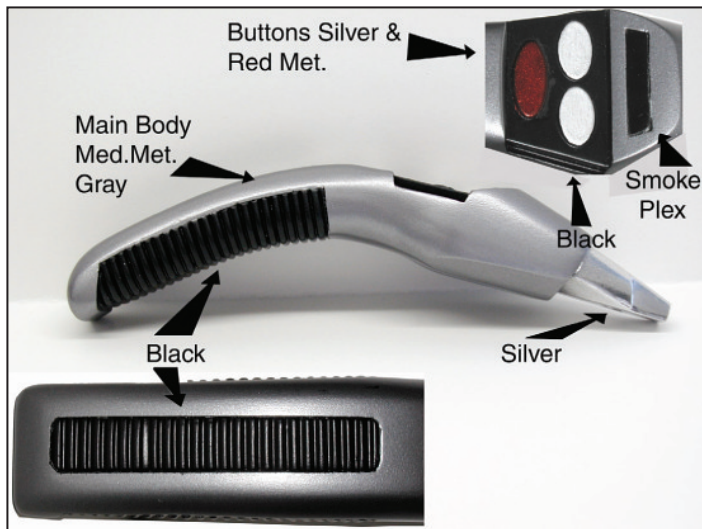

Step 2: After the emitter paint has cured, you can brush paint the buttons as shown, or mask and spray paint them. The smoke plex piece may need to be sanded to fit its slot. When you have a good fit, scrape paint away inside the slot and secure the plex with 5-minute epoxy, then the dolphin phaser is finished!



IMPORTANT NOTES:

The physical reproduction by any means known or yet to be invented (including recasting and/or reverse-engineering or 3D scanning/printing) of the Roddenberry.com Boomerang Phaser Kit or any of its parts is **expressly prohibited** under U.S. and International copyright and product protection laws.

Copyright © 2009 Roddenberry Productions.

Star Trek and related marks and logos are Trademarks of CBS Studios Inc. All rights reserved.